 
 


READY, SET, FRY!

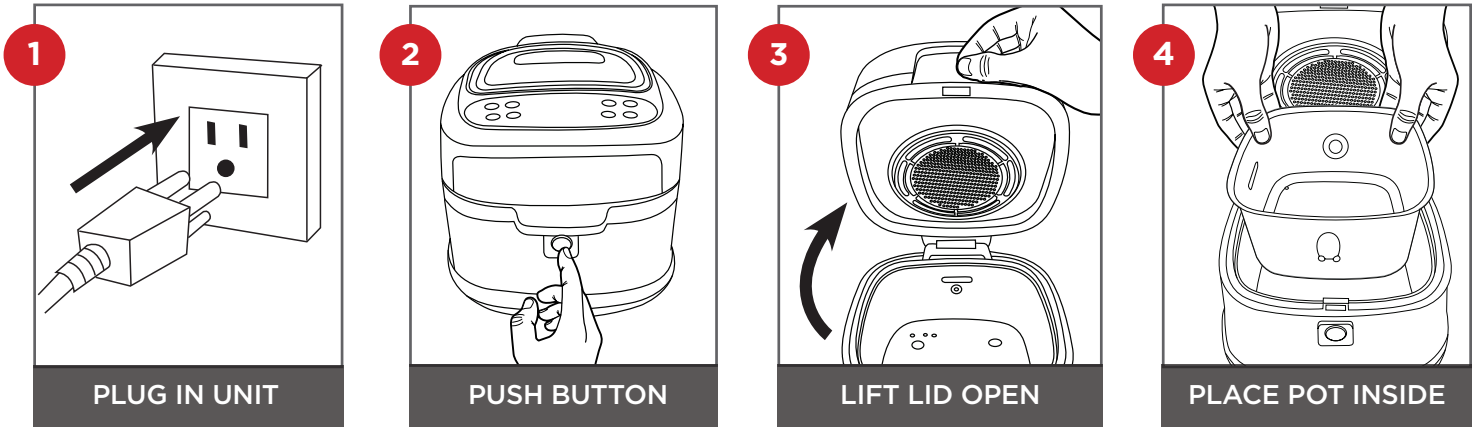


COOKING PRESETS, TIME AND TEMPERATURES

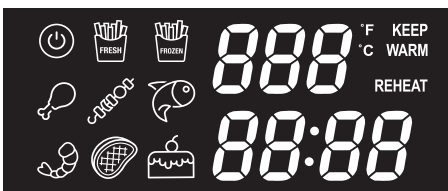

Preset	Time (min)	Temp (°F)
Power	30	375
Fries - Fresh	20	390
Fries - Frozen	25	355
Rotisserie	35	410
Skewer	15	405


Preset	Time (min)	Temp (°F)
Fish	30	390
Shrimp	10	390
Steak	15	355
Cake	30	355

 INCLUDED ACCESSORIES AND HOW TO USE THEM

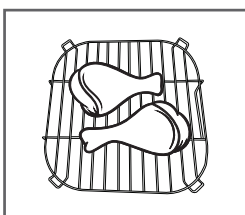


RACK

 Use the rack to place small item such as chicken legs or fish

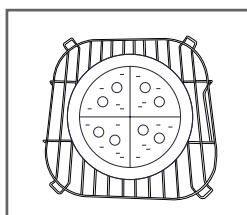


PAN

 Use the pan on top of the rack to bake a cake or a pizza

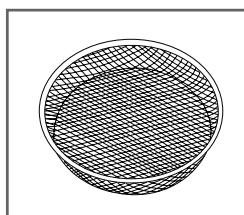


BASKET

 The wire basket can contain small or delicate food like french fries

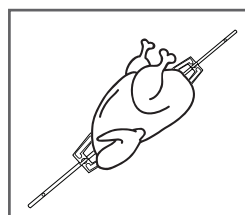

SKEWERS

 The skewers can rotisserie cook poultry, meat, or fish

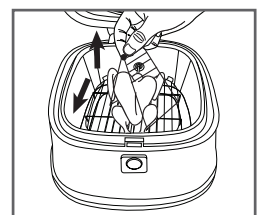

CLAMP

Use the clamp to remove basket or rotisserie food